


Wind Skate

Set Up and Trim

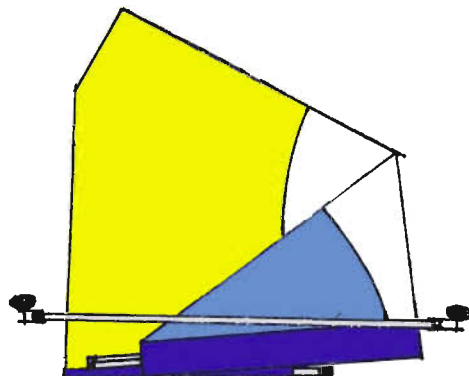


1. Untie cord around rolled up sail.



2. Un-roll sail away from poles.

3. Un-fold sail to full length.

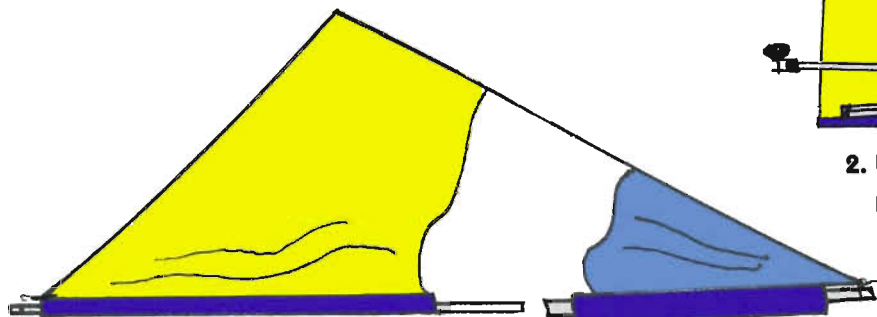

4. Place Hook around back of apex plates.

7. Put Hook thru hole on mast tip.

6. Sleeve aluminum poles inside sail sock.

5. Sleeve aluminum poles together.




11. FINAL TRIM

Pull straps on mast tips to tighten sail on rig.

8. Open sail to full size.

9. Position Cross-Bar on Mast Poles with Plate Clamps and Knob.

10. Stand WindSkate on edge and pull Cross-Bar to marks on mast poles to bow frame about 4 inches.

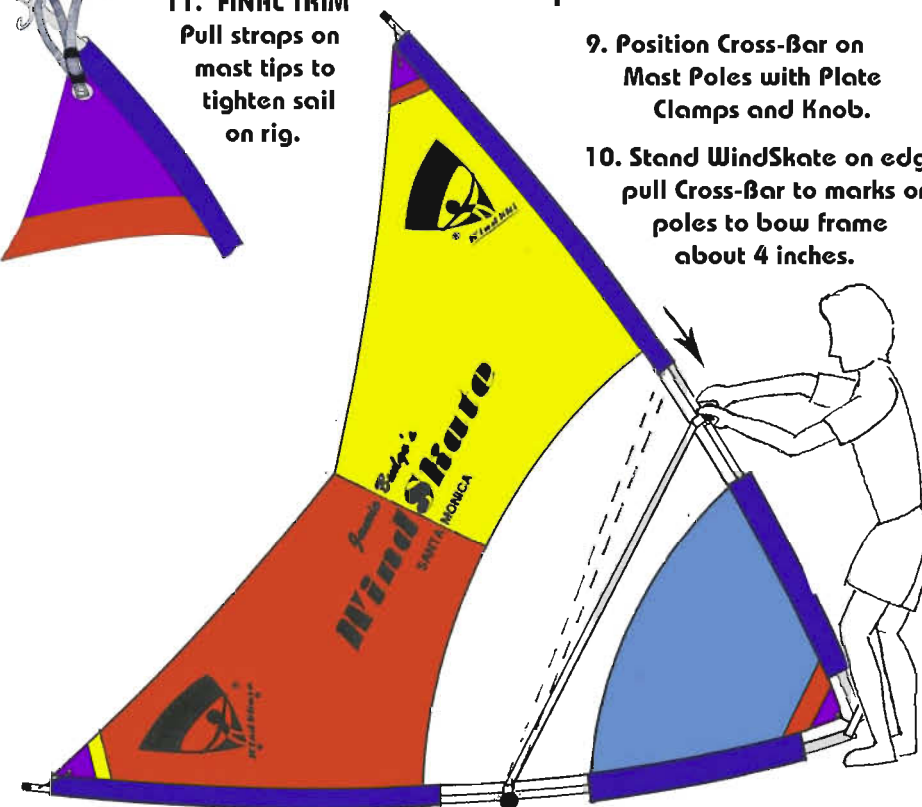

TRIM TIPS -

Sail should be trimmed to an even curve when filled with wind. Full curve for light winds, flatter sail for high winds. CHECK TRIM during use. Pull tip straps tight and check that Cross-Bar doesn't slip on Mast Poles.

To fold up WindSkate, reverse procedure. For any questions about set up or use, contact:
info@windskate.com (310) 453-4808